



Parking Brake

Disassembly and Reassembly

RELEASE BUTTON

PARKING BRAKE LEVER
Check for smooth operation.

SPRING

GREASE
Apply grease to sliding surface.

PARKING BRAKE CABLE
Check for smooth operation.

22 N·m
(2.2 kg-m, 16 lb-ft)

Check for faulty movement.

PARKING BRAKE SWITCH

CABLE EQUALIZER

CABLE ADJUSTING NUT

REAR DRUM BRAKE

Remove the parking brake cable from the backing plate using a 12 mm offset wrench as shown.

BACKING PLATE

12 mm
OFFSET WRENCH

PARKING BRAKE CABLE

REAR DISC BRAKE

Disconnect the parking brake cable from the lever on the caliper by removing the lock pin.

PARKING BRAKE CABLE

CLIP

LOCK PIN

COTTER PIN